

ESENSORS

Specializing in Network Sensors

Instruction Manual

HVAC Monitor Model EM08 Websensor

with SNMP/Email ALERTs

Version 3.0 (Build April 29 2011)

This Page Intentionally Blank.

COPY RIGHTS

The information in this document is subject to change without notice and should not be construed as a commitment by Esensors, Inc. While every effort has been made to assure the accuracy of the information contained herein, Esensors, Inc. assumes no liability for damages from the use of the information contained in this manual. All software described in this manual is furnished under a license and may be used or copied only in accordance with the terms of that license.

COPYRIGHT © 2010 by Esensors, Inc. All rights reserved. Websensor and the Websensor logo are trademarks of Esensors, Inc. Other products or company names are or maybe the trademarks or registered trademarks and are the property of their respective owners.

No part of this publication may be reproduced, photocopied, stored on a retrieval system or transferred without the expressed written consent of Esensors, Inc.

PRINTING HISTORY

January 2010 March 2010 June 2011 September 2011

LIMITED WARRANTY

This limited warranty is granted to the customer by Esensors, Inc. and extends only to the original customer performing the purchase of Esensors product. The goods you purchased are warranted free from defects in workmanship and materials at the time of sale. If a product exhibits a manufacturing defect, Esensors, Inc. will, at its option, repair or replace it (with the same or equivalent model), with no charge to you. If the limited warranty period is not explicitly stated on any prior written agreement, then the limited warranty defaults to one (1) year from invoice date.

Damage resulting from accidents, alterations, failure to follow instructions, incorrect assembly, misuse, unauthorized service, fire, flood, power surges, acts of God, regular wear and tear or other causes not arising from manufacturing defects is NOT covered by this warranty. If the product is altered in any way, the warranty is voided.

Esensors, Inc. or its suppliers will not be liable and will not compensate for loss of time, inconvenience, loss of the use of the product, property damage caused by the product, personal injury and/or death arising from the use of this product, its failure to work or any other incidental or consequential damage arising from the usage of this product. Esensors, Inc. provides no warranty, expressed or implied, as to the fitness of the products for any particular purpose. Parts used in repairing or replacing the product will be warranted until the original warranty expires. Products or parts that malfunction and are not warranted will be replaced or repaired and then shipped entirely at the expense of the customer.

This warranty is given in lieu of all other warranties, expressed or implied, including the warranties of merchantability and fitness for a particular purpose and constitutes the only warranty made by Esensors, Inc

CONTENTS

Introduction to the EM08-T	1
How the Websensor EM08-T Works	2
Websensor Hook-up	. 3
Websensor User Interface	. 5
Network Configuration	10
Sensor Log	13
Sensor Settings	15
Email Configuration	16
SNMP Configuration	18
Simple HTTP Request	19
Troubleshooting the Websensor	21
Reset	23
Quick Reference (Keyboard Short-cuts)	24

This page left intentionally blank.

Introduction to the EM08-T Websensor

The Esensors, Inc. Websensor EM08-T is an electronic device *classified* as a *Smart Sensor*. Websensor is designed to utilize the Internet to transmit temperature, relative humidity, detect contact closure, power supply voltage information and illumination data from a remote acquisition point to a host computer or hosted database.

The Websensor offers built-in signal conditioning and an embedded mini-webserver. Users are able to access the sensor using Hypertext Transfer Protocol (HTTP) based commands.



Figure 1 - EM08-T HTTP: Request/Response

Figure 1 (above) shows Websensor EM01B returning data via a HTTP: response.

Simply, Websensor's function is to send a response (by a HTTP: message) upon request from a *central website* or the *User's PC*.

The Websensor EM08-T supports a user configurable *IP* address. Websensor's IP address gives it uniqueness on the Ethernet based network which it is attached to. It is through the IP address, that Websensor is able to take its' place on the Internet, becoming fully accessible to query by the user.

Websensor consists of a base unit with one Ethernet communication ports. Within the base unit are microcomputers, which handle the Internet protocol, the communication ports, and the sensor and sensor signal conditioning. The Websensor has no switches, keyboard or display because it functions as a sensor, not as a computer.



Figure 2 – How Websensor works.

Compatibility with Earlier Websensors

Compatibility with the earlier models of Websensor has been maintained. Any version of the Websensor will always return temperature, relative humidity and illumination data by sending:

http://192.168.254.102/index.html?em

Websensor Hook-up

To configure and use a Websensor it must be connected to a PC via an Ethernet cable as shown in either figure below. If connecting directly to a PC, a **crossover** type Ethernet patch cable must be used. A crossover type Ethernet cable is included in the *Software & Documentation Package*.





If connecting to a PC through a HUB, a **straight** type Ethernet patch cable must be used between the HUB and the Websensor. A "straight" type Ethernet patch cable is also included with the Websensor; it is the BLUE patch cable.

Reference Figure 4 on the following page.



Figure 4 - Websensor connected through a HUB to the NIC in a PC.

Figures 5 and 6 below depict the locations of the connectors for the Ethernet, Wall Power Supply and location of the RESET SWITCH.



Figure 5 – Location of RJ45 and Wall Supply connectors.



Figure 6 – Location of RESET SWITCH.

Websensor User Interface

Once the Websensor is connected to a PC and powered via the supplied DC Wall Supply, the Websensor can be queried by typing the following command into the address line of the browser.

http://192.168.254.102

Note: The default address for the Websensor is 192.168.254.102. This requires that the PC being used to program the Websensor have its "network interface card" (NIC) set with the same subnet address: 192.168.254.***

Once the default IP address is entered, the browser screen should display the "Websensor EM08-T Main Page" as shown in Figure 7 below.



Figure 7 – Websensor EM08-T Main (Home) Page display

From the MAIN Page several other options are available from the panel displayed in the left-hand-side of the screen.

- Overview
- Sensor Status
- Visualizing Outputs
- Network Configuration

Overview

The "Overview" screen depicts information specific to the EM08-T Websensor such as the version of the firmware, build date of the firmware and device serial number. The device time can be sent form the network configuration page. See Figure 8 for the Overview screen depiction.



Figure 8 – The OVERVIEW Screen

Sensor Status

The SENSOR STATUS screen depicts the same information as the MAIN (HOME) page

From the Sensor Status screen it is possible to alter the temperature units by clicking on the "Change Temperature Unit" button.



© 2010 Esensors, Inc. All rights reserved. | 4240 Ridge Lea Rd Ste 37 . Amherst . NY . 14226 | Call 716 837 8719 | Email sales@eesensors.com |

Figure 9 – Sensor Status screen.

Visualizing Outputs

The VISUALIZING OUTPUTS screen permits simple graphs to be depicted for the temperature and relative humidity data points the Websensor collects.

Altering the ranges is easily accomplished by "left clicking" in the value areas and entering the desired range numbers. Next, click on the "Update Chart" button to effect the change.

Reference Figure 10 for a typical data capture. Note that the Temperature range has been changed to display between 50 and 100 degrees Fahrenheit.



Figure 10 – Visualizing Outputs screen

Network Configuration

The network configuration page is password protected. The default username and password for the device is *admin* & *password*. The NETWORK CONFIGURATION page enables the user to set up the device IP & host name using the web interface.

When the NETWORK CONFIGURATION button is clicked the NETWORK CONFIGURATION page appears; see Figure 11.

From the NETWORK CONFIGURATION screen it is possible to change the various network settings involved in any IP addressable device, port number for the webpage, DNS, gateway, admin ID and password. The device requires an internet connection if you want to set the device time. The device uses Network time protocol to log sensor data for maximum & minimum measurement. In case of power loss the device automatically corrects the time upon the next webpage access by the user. Once changes are made it is necessary to "left click" on the "Save Config" button to have the changes take effect.

When you change the IP address though the webpage interface, the next page displayed is the "Reboot in Progress" page depicted in Figure 12.

Note: If you get the message "Error: Connection to EM08 device was lost" is because the browser still points to the former IP address. When the new IP address is entered into the address bar the screen will correctly display the EM08-T MAIN (Home) Page.

Network Configuration

		Websensor EM08 Ver.2 Applicat
Overview	EM08 Networ	k Configuration
Sensor Status Visualizing Outputs	CAUTION: Incorrect set connectivity. Recovery of	tings may cause the device to lose network options will be provided on the next page.
Sensor Log	Enter the new settings for t	he device below:
Sensor Settings	MAC Address:	00:50:C2:DB:B1:A1
Network Configuration	Host Name:	EM08_WEBSENSOR must be less than 16 bytes
email Configuration		Enable DHCP
SNMP Configuration	IP Address: Gateway:	192.168.254.102 192.168.254.1
57. 	Subnet Mask:	255.255.255.0
	Primary DNS:	4.2.2.1
	Secondary DNS:	192.168.254.1
	User Name: Password: Re-enter Password:	Change User Name and Password <= 8 characters <= 10 characters Submit Set Device Clock

Figure 11 – Network Configuration screen.

	Websensor EM08 Ver.2 Application
Overview Sensor Status Visualizing Outputs	Reboot In Progress Your settings were successfully saved, and the device is now rebooting to configure itself with the new settings.
Network	Your device is now located at: http://EM08V2/
Configuration	Reconnection Instructions
	 Did you change the hostname? You should be able to access your device by clicking the link above.
	 Did you change the MAC address? The DHCP server probably assigned the device a new IP address, but your computer's network cache has saved the wrong address. From the command prompt in Windows, enter "nbtstat -R" or "arp -d" to clear old values, then try the link above.
	 Did you try the IP address? Try accessing the device directly at the IP address just inputed if DHCP was turned off. (ex: enter "http://192.168.5.23/" into your browser). If this fails, then the IP address you set is not reachable. Try the step below.
	4. Still not working? You can restore the factory default settings by erasing the device's flash ROM. Hold the button by inserting a paper clip into the small hole on the left side panel of the device and repower the device, first, the device enters bootloading state which will last for four seconds, both Power LED and Activity LED are extinguished in this state, then they will flash for three times and enter startup state. Continue holding the button, the device will enter restoration state. Power LED and Activity LED are extinguished, which means restoration is done. The whole procedure takes about eight to ten seconds.
© 2008 Esens	sors, Inc. All rights reserved. 4240 Ridge Lea Rd Ste 37 . Amherst . NY . 14226 Call 716 837 8719 Email sales@eesensors.com

Figure 12 – "Reboot in Progress" screen

Sensor Log

If the device supports Sensor Log, it enables the EM08 to recording sensor alarm log and measurements' peak log (daily peak and historical peak). All logs contain recorded value and timestamp.

One can clear all log records, the daily peak log will be cleared by device every 24 hours or by clicking "Clear *Daily Peak Record* "button in *Sensor Log* webpage. The sensor alarm log and historical peak log are protected by password, they can be cleared in *Sensor Settings* webpage by clicking "*Clear Sensor Alarm Records*" or "*Clear Historic Peak Record*" button.

Note: The device's clock must be properly configured to provide correct timestamp.

Setting Device Time

There are two ways to set device's clock. One is to let device automatically synchronize its clock from Internet every day, there are no accumulated time errors in this mode. The network configurations like gateway and DNS must be properly set for this feature since device need Internet access.

Another way is to set device's clock manually. This can be done by click "Set Device Clock" button in Network Configuration webpage. Device does not need Internet access in this mode. The disadvantages are: the clock need to be set whenever device is re-powered since it can not save time when power lost; the time may have accumulated error in long running time.

Sensor Alarn Record	1 Trigg Va	lue	Occured Time	
N/A	N/A		N/A	
Daily Peak Log				
Measurement	Peak Value	Occured Time Seturday, Octobe 01, 2011 5:37:43 PM		
Temperature 7 Min	77.0F			
Temperature Max	101.4F	Satur 01, 20 PM	day, October 011 5:10:04	
Humidity Min	18.7%	Saturi 01, 20 PM	day, October 011 5:10:04	
Humidity Max	89.9%	Séturi 01, 20 PM	day, October 011 5:11:33	
Illumination Min	127.6Lx	Saturi 01, 20 PM	day, October 011 5:10:39	
Illumination Max	1846Lx	Saturi 01, 20 PM	day, October 011 5:03:49	

Sensor Alarm Log

Clear Daily Peak Record

Historic Peak Log

Measurement	Peak Value	Occured Time
Temperature Min	77.0F	Saturday, October 01, 2011 5:37:43 PM
Temperature Max	101.4F	Saturday, October 01, 2011 5:10:04 PM
Humidity Min	18.7%	Saturday, October 01, 2011 5:10:04 PM
Humidity Max	89.9%	Saturday, October 01, 2011 5:11:33 PM
Illumination Min	127.6Lx	Saturday, October 01, 2011 5:10:39 PM
Illumination Max	1846Lx	Saturday, October 01, 2011 5:03:49 PM

Figure 13 – Sensor Log Page

Sensor Settings

This page holds the sensor thresholds for email alerts sent by device. The trip tile is the time for which the sensor data has to violate the threshold to be considered as an alert. The Return time is the time interval after which the alert status returns back to normal if the measured a data returns back within the specified threshold. Alarm interval is the minimum interval after which the send alert for the sensor will be reported if the threshold conditions still remain violated. However if an alert occurs for a different sensor within the time interval would be reporter.

Lower limit:	.0	Lx
Upper limit:	3270.0	Lx
Ilum Trip Time:	3.0	Sec. Time tick is 1.5 Sec.
Return Time:	60.0	Sec.
Temperature Thr	eshold,	range: -40-255 F
Lower limit:	-40.0F	F or C, default is F
Upper limit:	254.8F	
Temp Trip Time:	10.5	Sec. Time tick is 1.5 Sec.
Return Time:	60.0	Sec.
Upper limit: Humd Trip Time:	100.0%	Sec. Time tick is 1.5 Sec.
Lower limit: Upper limit:	.0%	%
Return Time:	60.0	Sec. Time tick is 1.5 Sec.
NOLULI HING	and the second	
Alarm Interval:	Enat 1638 mir Note 2 ema Save Se	ole send alarm email, Note 1 nutes, must be <1638 min. il max/min values every day ettings



Email Configurations

The Email Configuration is selected by clicking on the "email Configuration" button displayed in the menu as shown in Figure 15 below. The email Configuration page is password protected. The default username is **admin** and password is **password**.



Figure 15 – Sensor Status Screen showing email Configuration button

Enter the settings for the SMTP server and port number. If SSL is used enter the user id and password for the from email address that you have created for the device. Contact your email service provider to get information about your SMTP server and port number.

Enter the recipient email(s) separated by commas. The description is optional and can be customized by the user. See Figure 16 below.



0 2010 Esensors, Inc. All rights reserved. | 4240 Ridge Lea Rd Ste 37 . Amherst . NY . 14226 | Call 716 837 8719 | Email sales@eesensors.com |

Figure 16 Email Configuration Screen

SNMP Configurations SNMP Configurations

The devices featuring SNMP would enable networking monitoring software to use SNMP protocol to read sensor measurement. The device supports SNMP v2c and the read port is 161. The default read community is public.

OID List

1.3.6.1.4.1.23718.3	measurements
1.3.6.1.4.1.23718.3.1.0	illumination
1.3.6.1.4.1.23718.3.2.0	humidity
1.3.6.1.4.1.23718.3.3.0	temperature
1.3.6.1.4.1.23718.3.4.0	temperature unit

Overview	SNMP Comm	unity Configuration
Sensor Status	Read/Write Community St	ring configuration for SNMPv2c Agent.
Visualizing Outputs	Configure multiple commu respond to the NMS/SNMP	nity names if you want the SNMP agent to manager with different read and write
Sensor Log	community names. If less extra fields blank to disabl	than three communities are needed, leave e them.
Sensor Settings	Read Comm1 :	nublic
Network Configuration	Read Comm2 :	read
email Configuration	Read Comm3 : Write Comm1:	private
SNMP	Write Comm2:	write
Configuration	Write Comm3:	public
		Save Config

Figure 17 SNMP Configuration Screen

Simple Http Request

Websensor EM08 outputs a data string when it receives http request. This simple approach enables end users to develop their own application to monitor data. The data format is supported in all the plug-in's provided on the CD including Esensors' Data logger program (used to monitor temperature and relative humidity & issue email alerts upon threshold violation).

The string can be obtained by typing the device IP followed in the address bar of the browser.

http://192.168.254.102/index.htm?em

or

http://192.168.254.102/index.html?em

A Sample Return String:

N123456TF: 71.2HU:24.5%IL:218
Where 123456 is device serial number,
Temperature in Fahrenheit TF is 71.2,
Relative Humidity HU is 24.5%,
Illumination IL is 218

See Figure 18 (below) for a sample screen depicting the returned string.



Figure 18 Sample Return String on screen

Http Request

The device also supports simple xml data output. The xml data can be obtained by typing the device IP followed in the address bar of the browser.

http://192.168.254.102/status.xml

<response>

<sid0>702240T</sid0>	-Device Serial Number
<stu0>OK</stu0>	- Device Status
<tm0>78.2</tm0>	- Temperature Measurement
<hu0>34.1</hu0>	- Humidity Measurement
<il0>1725</il0>	- Illumination Measurement
<tun0>F</tun0>	- Temperature Unit

In addition the device also features a simple text output that can be used by some software. Note

WSD:Tm[78.2]Hu[34.1]II[1636]Th[32.0]Vi[0.0]Ci[0]

Where

Temperature in Fahrenheit Tm is 78.2, Relative Humidity Hu is 34.1%, Illumination IL is 1636

Note: The extra information or xml tags that may appear on the data string or xml page are reserved for future use.

Basic Troubleshooting Instructions

1. Did you change the IP address?

The DHCP server probably assigned the device a new IP address, but your computer's network cache has saved the wrong address. From the command prompt in Windows, enter "nbtstat -R" or "arp -d" to clear old values and try again. Make sure you launch the command prompt as administrator.

2. Did you try the IP address?

Try accessing the device directly at the IP address just inputted if DHCP was turned off. (Example: enter "http://192.168.5.23/" into your browser). If this fails, then the IP address you set is not reachable. Accessing device via IP address is more reliable than using host name since some networks may have troubles dealing with host name. If you forgot the IP address and the host name of EM08 device, try Step 3 below.

3. Use Ethernet Discoverer to hunt EM08 devices

Microchip's Ethernet Discoverer is a very nice tool to list all EM08 devices on the same subnet. Double click *Microchip Ethernet Discoverer.exe*, Click "Discover Devices" button, the IP address, Host name and MAC address of all EM08 devices will be listed. It is also helpful to check EM08's IP address when it is automatically assigned by DHCP server. *Microchip Ethernet Discoverer.exe* do not need to be installed, it can be copied to and executed from any location. (This utility program can be found on the supplied CD in the "Manual" Folder within the "EM08" Folder.

Trouble Shooting

<u>D</u> iscover Dev	ices			
P Address	Host Name	MAC Address	Other Info	
192.168.254.107	Discovery: Who is out there?			
192.168.254.133	EM08V2	AA-BB-CC-DD-EE-FF		
192.168.254.102	EM08V2	AA-BB-CC-DD-EE-FA		

Figure 19 – Microchip Ethernet Device Discover screen

4. Still not working? Device Reset

You can restore the factory default settings by erasing the device's flash ROM.



Figure 20 – Location of the RESET SWITCH

Resetting the EM08

- Hold the button by inserting a paper clip into the small hole on the left side panel of the device and then re-power the device.
- The device enters boot loading state which will last for four seconds, both Power LED and Activity LED are extinguished in this state, then they will flash for three times and enter startup state.
- Continue holding the button, the device will enter restoration state, In this state you will notice the Power LED and Activity LED are solid ON in this state.
- You should not release the button until both LEDs are extinguished, which means restoration is done.
- The whole procedure takes about eight to ten seconds. The factory default IP address is "192.168.254.102".

Quick Reference

EM08 Keyboard Short-cuts:

Display sensor measurements, using EM08V2 as the host name:

http://em08v2/index.htm/?em

Display sensor measurements:

http://192.168.254.102/index.htm?em

Change Temp unit to C:

http://192.168.254.102/index.htm?etpC

Change Temp unit to F: http://192.168.254.102/index.htm?etpF

Change Temp unit from C to F or F to C:

http://192.168.254.102/index.htm?etpX

Esensors, Inc.

4240 Ridge Lea Road Amherst, NY 14226 Phone: 716-837-8719 www.eEsensors.com

© Copyright September 2011 Esensors, Inc.